

Quick Start Manual
CONQUEST F2



Email: enquiries@comm360.biz

Description



- | | |
|---|---|
| 1. FN custom button | 9. Call hang up button / lock screen button |
| 2. PTT walkie talkie button | 10. Menu button |
| 3. Fingerprint scanner | 11. Type-C port |
| 4. Menu button | 12. Volume + |
| 5. Dial button
(Short press to switch handsfree/handset mode) | 13. Volume - |
| 6. Strong torch | 14. Power button |
| 7. Front camera | 15. FN custom button |
| 8. Back button | 16. Rear camera |
| | 17. NFC area |
| | 18. Removable cover (Battery/ SIM/TF) |

Safety instructions

READ THIS INFORMATION BEFORE USING YOUR MOBILE DEVICE.

1. General Safety

- Please use the screen protector that does not block the light sensor to avoid affecting its normal use.
- Please use the official original accessories to avoid damage to the phone.
- Do not keep the magnetic stripe card with the mobile phone together for a long time, otherwise the magnetic stripe will out of action.
- Do not expose your phone to strong sunlight to avoid damage due to overheat.
- Do not connect with other Unauthorized equipment.
- Do not disassemble the phone.
- It is forbidden to put the mobile phone under high temperature or throw it into fire to avoid explosion.

2. Traffic Safety


- Please do not use the phones and follow the relevant traffic laws when driving.
- Do not place the mobile phone above the car's airbag or inside the area covered by the airbag released.
- Please comply with the relevant regulations of the airline. Do not use your phone in the area or during the time when it is forbidden. Please turn off your phone if necessary.

3. Medical safety

- The radio waves of mobile phones may affect some medical devices, such as pacemakers, cochlear implants, hearing aids, etc. The mobile phone and these medical devices should be kept at least 20 cm away. Feel free to consult the restrictions on the use of mobile phones with manufacturer when exception occurs.

USE TIPS 1

Quick Install SIM Card/SD Card

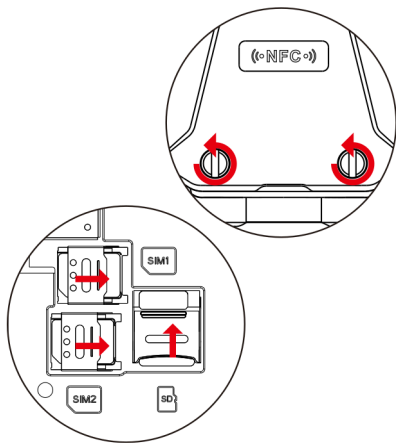


Please do the following with the power off:

1. Turn the screw counterclockwise to open the back cover.
2. Both SIM1 and SIM2 covers slide to the right to open the SIM cover. After unlocking the SIM cover, place the SIM card in the designated position, then close the SIM cover and turn the SIM cover to the left to lock it to complete the SIM installation.
3. The right slot is the TF card slot, TF card maximum can support 2TB. First open the TF cover, then put the TF card in the designated position, and then cover the TF cover to lock it to complete the TF installation.

USE TIPS 2

Preparation before entering the water

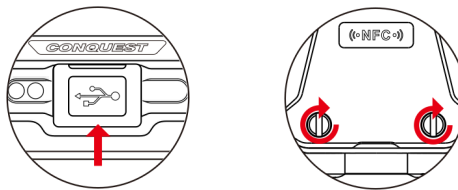

USB port should be firmly closed

Check whether the inner waterproof ring is in good condition, then install the battery cover and tighten the two screws clockwise.

WARNING

1. Before into the water, all ports and connections must be checked according to the above operations.
2. The phone's waterproof performance will be affected after a destructive fall.
3. Take the device out of the water, the speaker and receiver need to be completely dry before using, otherwise, it will affect the experience.

Packing list

F2 smartphone	1
Battery	1
Quick guide	1
Power adapter	1
Type-C data cable	1
Screwdriver	1
Belt clip	1
Handstrap	1
Dock station	1

THE BASICS OF TROUBLESHOOTING

Problem	Solution
Abnormal microphone/ Speaker/Receiver behavior post drop in water	Shake the phone dry to make sure the water is out of membrane. Use the hair dryer to quickly dry the excess water to restore the volume to normal.
App Crashes/Freezes/Unable to recharge/Restart frequently	Quick restart often solves minor issues with phone. On the right side of the phone you will find a power button. Restart the phone using that button.
Magnetic charger/Dock charger not working	Check the charger and the contact position for any signs of dirt or oxidation. A quick wipe with cotton swab and alcohol should solve the issue.
Abnormal power consumption	First, you should try to dim the screen brightness and turn off the GPS, WiFi and Bluetooth if you are not using them. Additionally, you should check your Battery Usage in your phone Settings and see which apps are using more battery. You can close or disable the ones that are draining more battery if you usually do not need them.
Unable to register the SIM card	If after proper installation of SIM card the phone doesn't recognize the network try switching the flight mode on-and-off or try restarting the phone. If the issue still persists clean the chip with alcohol and cotton swab.
MicroSD card does not work	Your microSD probably has errors and your phone is not recognizing that card. Try to connect a card reader to your PC and format the microSD card at least two times. Restart your mobile phone and insert the SD card again.
Mobile network not registering internet access	Go to settings-Network&internet-Mobile network-Mobile data-switch it on. Or slide the screen to shortcut menu-click the signal icon on upper right corner of the mobile data network- switch it on.
Restore to factory setting	Please note factory reset will erase all the data from the phone, so make sure you take the backup of data before you do a factory reset. Open settings-System-Advanced-Reset options-Erase all data (factory reset).